



X-ACT CONTOUR

FLOOR LINERS

CARE AND USE INSTRUCTIONS – PN:53731

Thank you for selecting X-act Contour™ Front Floor Liners from Winfield Consumer Products. Your new front floor liners are custom molded to fit your specific vehicle's floor board. The liners are made to take the place of your factory floor mats. **For correct fit, it is necessary to remove the factory floor mats before installing your new floor liners.** However, do not remove the factory-installed carpeting.

When installing your floor liners, remove the floor mat retention hooks on your vehicles driver's side floor board. Install the two snap in fasteners provided and align the retention hole in your floor liner over the hole and screw on the caps to secure the driver's side liner. Secure the passenger's side by screwing the liner retention screw into the carpet and align the liner over the hole in the liner and screw on the retention screw cap.

Your liners are made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liners is with a damp cloth or sponge and soap and water. Windex®, 409® and ArmorAll® type cleaners work as well.

LEFT OR DRIVER





RIGHT OR PASSENGER





HUSKY FLOOR LINER RETAINING CLIP INSTALLATION INSTRUCTIONS FOR USE IN VEHICLES WITH REMOVABLE FACTORY MAT HOOKS

YOUR NEW LINER SET INCLUDES OUR NEW PATENT PENDING FLOOR LINER RETAINING CLIP SYSTEM. THIS RETAINING CLIP GIVES THE EXTRA SECURITY PROVIDED BY AN OEM STYLE FASTENER WHILE KEEPING SPILLS AND DEBRIS TRAPPED INSIDE THE LINERS. TO INSTALL THE HUSKY® LINER RETAINING CLIPS, SIMPLY FOLLOW THE INSTRUCTIONS BELOW:


- 1) REMOVE THE EXISTING FACTORY MAT HOOK AS SHOWN IN IMAGE 1 AND IMAGE 2 BELOW. MODERATE EFFORT IS REQUIRED TO POP THE FACTORY HOOKS OUT. NEWER GENERATIONS OF THE FACTORY HOOK HAVE A CENTER SPREADER THAT MUST FIRST BE REMOVED BEFORE THE HOOK WILL RELEASE. SEE IMAGES 3 AND 4 BELOW. ONCE THE SPREADER IS REMOVED, THE HOOK WILL POP OUT JUST AS WITH THE OLDER STYLE HOOKS. YOU CAN WATCH A YOUTUBE VIDEO OF THE HOOK REMOVAL BY ACCESSING THIS LINK-- http://www.youtube.com/watch?v=5P-d_BkQ6Uc.

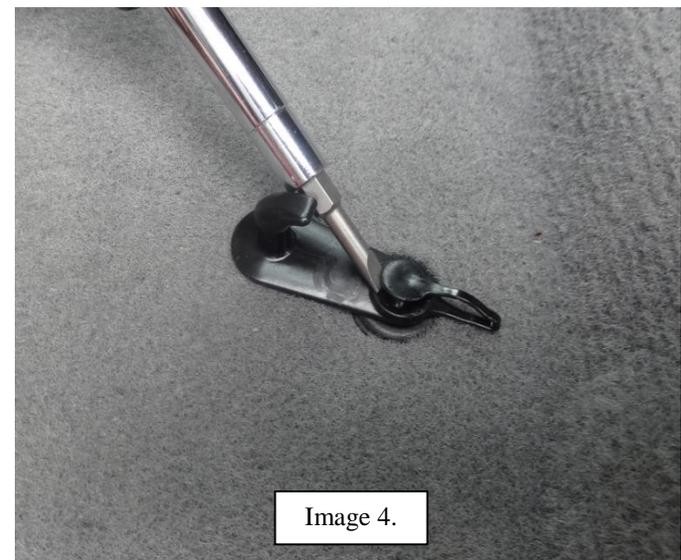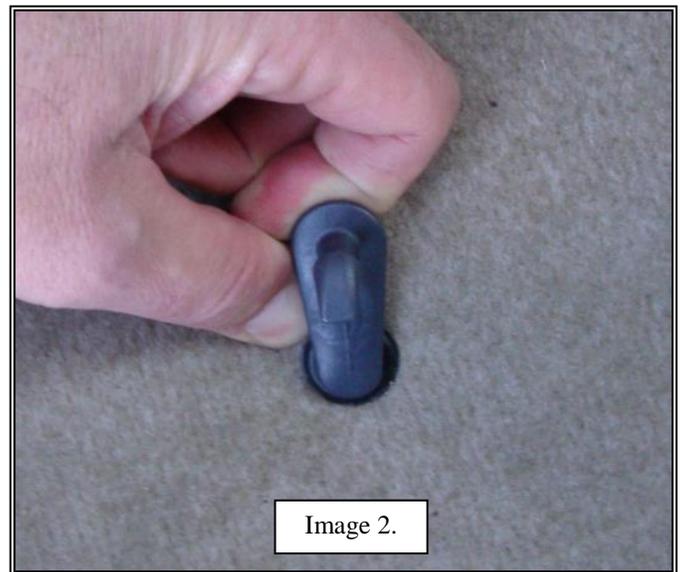

- 2) WITH THE FACTORY CLIPS REMOVED, UNSCREW THE TWO HALVES OF THE HUSKY® RETAINING CLIP AND INSERT THE BOTTOM HALF INTO THE EXISTING FACTORY GROMMETS LOCATION AS SHOWN BELOW IN IMAGE 5 AND IMAGE 6. THE BOTTOM PORTION WILL “SNAP” SECURELY INTO THE FACTORY GROMMET LOCATION. RETAIN THE TOP HALF OF THE CLIP FOR LATER INSTALLATION.

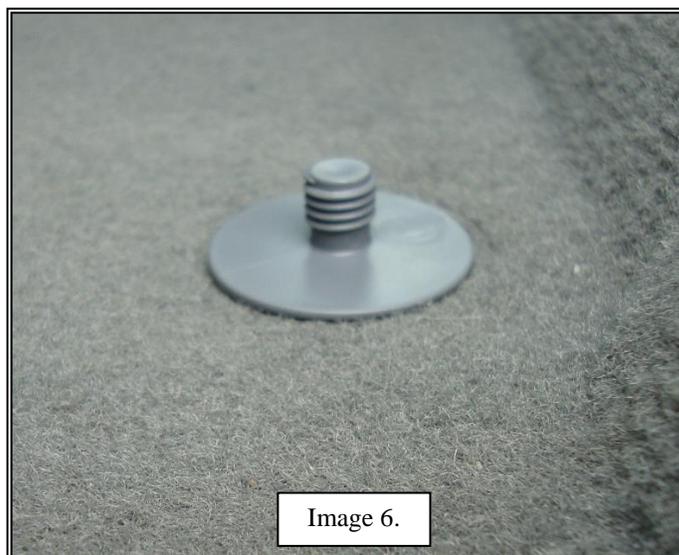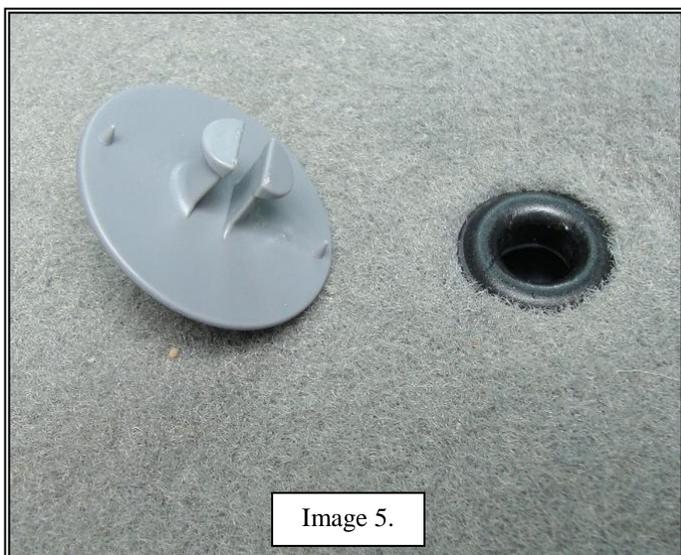

- 3) NOW THAT YOU HAVE THE BOTTOM PORTION OF THE RETAINING CLIPS INSTALLED, PLACE THE LINER IN THE VEHICLE TAKING CARE TO ALIGN THE HOLES IN THE LINER WITH THE THREADED PORTION OF THE BOTTOM RETAINING CLIPS AS SHOWN IN IMAGE 7 BELOW. LASTLY, SCREW THE TOP HALF OF THE RETAINING CLIPS ONTO THE TREADED POST OF THE BOTTOM PORTION, SECURING THE LINER IN PLACE AS SHOWN IN IMAGE 8.

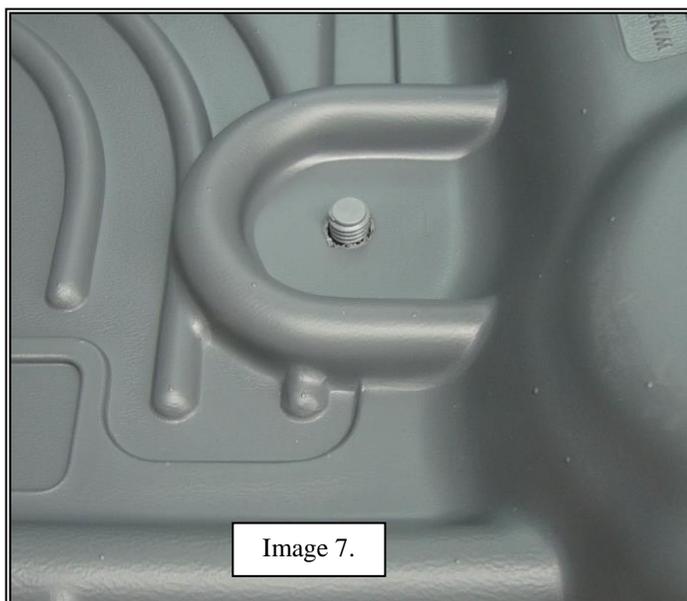

IF YOU HAVE ANY QUESTIONS REGARDING THE INSTALLATION OF YOUR HUSKY® LINER RETAINING CLIPS, JUST GIVE US A CALL MONDAY THROUGH FRIDAY FROM 8:00 AM – 5:00 PM CENTRAL TIME AT 800-344-8759 OR E-MAIL US AT: contactus@huskyliners.com.